

Adjustable power, Adjustable color temperature controller instructions (manual operation)

- Pull out the controller cover firmly upwards. See picture 1
- Adjust the power in zone A and adjust the color temperature in zone B. The factory default power is 75W and the color temperature is 5000K. See picture 2.

Instructions for adjusting the power (zone A):

1. Adjust to 50W: pull A1 to ON, A2 to OFF, see picture 3.
2. Adjust to 30W: Pull A1 to OFF. Pull A2 to ON. See picture 4.





Instructions for adjusting the color temperature (zone B):

- 3 gears adjustment: B3=3000K, B2=4000K, B1=5000K.
The factory default is 5000K (B1). When adjusting the color temperature, just pull the button to the corresponding position.

How to use photocell sensor:

Open the photocell sensor function: remove the photocell sensor cover.

Close the photocell sensor: close the photocell sensor cover.

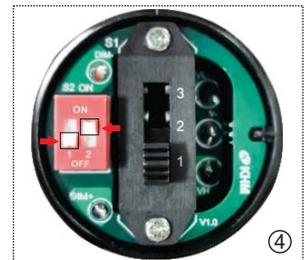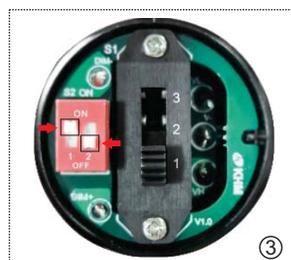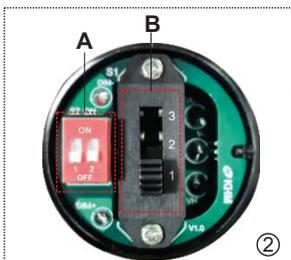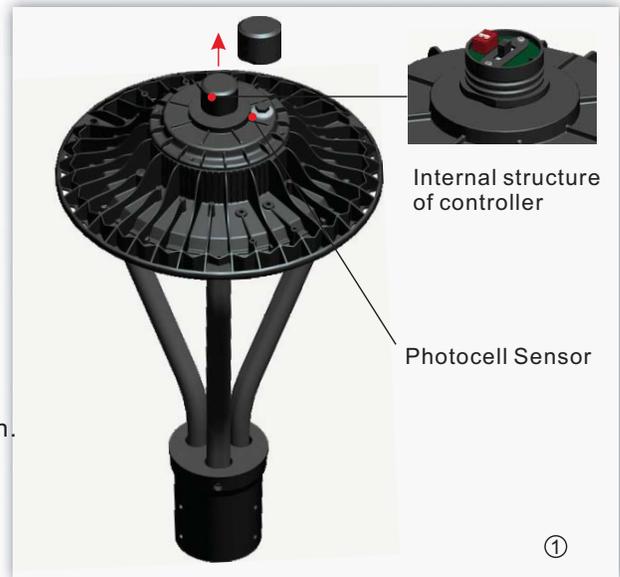

INSTALLATION

Fixture assembly

- Feed the (3) Housing wires through one of the three Rods.
- Clip the (3) Rods onto the Housing. Be sure the Housing clips are properly engaged onto the Rods.
- Feed Fixture Wires through the Tenon Pole Adaptor.
- Slide Tenon Pole Adaptor on three Rods. Be sure the notches face the inside of the Tenon Pole Adaptor.
- Tighten the (3) Set Screws at the Tenon Pole Adaptor to secure Rods.

